

# FACTORY LED OR HALOGEN?

*How to remove your rear lights and check.*

**DIFFICULTY:**



NOVICE


EXPERT

## TOOLS REQUIRED:

SCREWDRIVER



HANDS

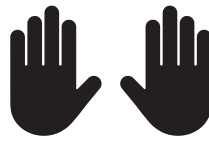

## STEP 1



OPEN YOUR TAILGATE REAR DOOR. BARN DOOR MODELS HAVE A DIFFERENT LISTING

## STEP 2



REMOVE THE TWO SCREWS HOLDING THE LIGHT IN PLACE

### **STEP 3a DRIVER SIDE**



IN THE OUTWARD DIRECTION,  
GIVE THE LIGHT UNIT A SHARP  
KNOCK WITH YOUR FIST

### **STEP 3b PASSENGER SIDE**



IN THE OUTWARD DIRECTION,  
GIVE THE LIGHT UNIT A SHARP  
KNOCK WITH YOUR FIST

### **STEP 4**



PINCH TAB ON  
THE CONNECTOR

### **STEP 5**



WHILE MAINTAINING  
PRESSURE, PULL APART TO  
RELEASE THE CONNECTOR

## **STEP 6**



**FACTORY LED**



**FACTORY HALOGEN**

INSPECT YOUR CONNECTOR AND IDENTIFY THEM USING THE ABOVE IMAGE REFERENCE

# STEP 7

## VW T6.1 Sequential Indicator LED Rear Lights – TAILGATE – Red Clear

£299.95

Is Your Van Factory Halogen or LED?	Choose an option ▼
	Choose an option
	Halogen
	LED

- OR -

Add to basket

SELECT THE APPROPRIATE OPTION FROM THE  
DROP-DOWN MENU ON THE WEBSITE

